

Quick Guide

Thanks for choosing our DI、DO、DU series, this guide will take you know how to use this product.

Notice

To ensure reliable use of the equipment and the safety of personnel, please observe the following during installation, use, and maintenance.

1. When installing the equipment, ensure that the earth wire in the power cable is well grounded and the chassis grounding point is well grounded.

2. Keep the working environment well ventilated so that the heat generated by the equipment during operation can be discharged in time to avoid damage to the equipment due to high temperature.

3. Turn off the main power supply of the equipment in a humid and dewy environment or when it is not in use for a long time.

4. Always unplug the AC power cord from the power supply socket before the following operations.

A. Remove or reassemble any part of the appliance.

B. Disconnect or reconnect any electrical plugs or connections to the appliance.

5. Do not dismantle the appliance without permission from a non-specialist to avoid the risk of electric shock. Do not repair the appliance yourself as this may aggravate the damage to the appliance.

6. Do not spill any corrosive chemicals or liquids on or near the appliance.

The disconnecting device is the appliance coupler, which is located in the rear casing of the appliance. When the appliance is not in use, disconnect the power cable from the appliance via the appliance coupler and do not place other objects near the appliance coupler to prevent disconnection of the appliance from the power supply.

1. Equipment information

DI 22



① DANTE interface must connect to PoE switch

② Analogue input 1

③ Analogue input 2

DO 22



① DANTE interface must connect to PoE switch

② Analogue output 1

③ Analogue output 2

DU 22



① DANTE network interface

② USB interface

2. Equipment parameters

Model	DI22	DO22	DU22
Maximum signal level (balanced)	18dBu		/
Frequency response	20Hz-20kHz,±0.5dB		/
Impedance	20kΩ (balance) 10kΩ (unbalanced)	110Ω (balance)	/
Dynamic Range	>100dB		/
Signal to Noise Ratio	>100dB		/
THD+N	< 0.003%@4dBu,1KHz		/
Connector	RJ45 及 1 XLR-F RJ45 及 2 XLR-F	RJ45 及 1 XLR-M RJ45 及 2 XLR-M	RJ45 and USBA
Power supply	Class1802.3afPoE		USB
Sampling Rate	48kHz		
Bit Depth	24bit		
Latency	1、 2 or 5ms (Dante Controller Configuration)		
Network transmission	Dante IP AES67 RTP audio		
USB	/	/	USB2.0

3. Equipment operation

- ① Connect the equipment correctly
- ② Control DANTE audio routing with Dante Controller

4.Packing list

Device	Certificate of Conformity	Quick Guide
1	1 sheet 1 copy	1

5.Warranty Card

Date of manufacture:
Model no:
S/N:
Distributed

